



# USB Synopsys OTG Host Controller User Guide

Version 1.60

For use with USBH Synopsys<sup>®</sup> OTG Host Controller versions 3.16 and above

All rights reserved. This document and the associated software are the sole property of HCC Embedded. Reproduction or duplication by any means of any portion of this document without the prior written consent of HCC Embedded is expressly forbidden.

HCC Embedded reserves the right to make changes to this document and to the related software at any time and without notice. The information in this document has been carefully checked for its accuracy; however, HCC Embedded makes no warranty relating to the correctness of this document.

## Table of Contents

<b>1</b>	<b>System Overview.....</b>	<b>4</b>
1.1	Introduction .....	5
1.2	Feature Check .....	6
1.3	Packages and Documents .....	7
	Packages.....	7
	Documents .....	7
1.4	Change History .....	8
<b>2</b>	<b>Source File List .....</b>	<b>9</b>
2.1	API Header File .....	9
2.2	Configuration File.....	9
2.3	Source Code Files.....	9
2.4	Version File .....	9
2.5	Platform Support Package (PSP) Files.....	10
<b>3</b>	<b>Configuration Options .....</b>	<b>11</b>
<b>4</b>	<b>Starting the Host Controller .....</b>	<b>13</b>
4.1	usbh_synopsys_otg_hc .....	13
4.2	Host Controller Task .....	13
4.3	Code Example .....	14
<b>5</b>	<b>Integration.....</b>	<b>15</b>
5.1	OS Abstraction Layer .....	15
5.2	PSP Porting .....	16
	synopsys_uh_hw_init .....	17
	synopsys_uh_hw_start.....	18
	synopsys_uh_hw_stop .....	19
	synopsys_uh_hw_delete .....	20
	synopsys_uh_hw_reset_start .....	21
	synopsys_uh_hw_reset_end.....	22
	synopsys_uh_hw_suspend .....	23
	synopsys_uh_hw_resume .....	24
	synopsys_uh_hw_state .....	25
	synopsys_uh_hw_get_ms .....	26



# 1 System Overview

This chapter contains the fundamental information for this module.

The component sections are as follows:


- [Introduction](#) – describes the main elements of the module.
- [Feature Check](#) – summarizes the main features of the module as bullet points.
- [Packages and Documents](#) – the *Packages* section lists the packages that you need in order to use this module. The *Documents* section lists the relevant user guides.
- [Change History](#) – lists the earlier versions of this manual, giving the software version that each manual describes.

## 1.1 Introduction

This guide is for those who want to implement HCC Embedded's Synopsys® OTG USB Host Controller module with the HCC USB host stack. This module provides a USB host controller for Synopsys® On The Go (OTG) microcontrollers; these include the STM32 connectivity line, STM32F20x, STM32F40x, Infineon XMC microcontrollers, the Silicon Labs EFM32™ family, and some Telit processors.

The Synopsys® OTG Host Controller provides a high speed USB 2.0 host controller which provides both full and low speed USB functions. The controller can handle all USB transfer types and, in conjunction with the USB host stack, can be used with any USB class driver.

The position of the host controller within the USB stack is shown below:

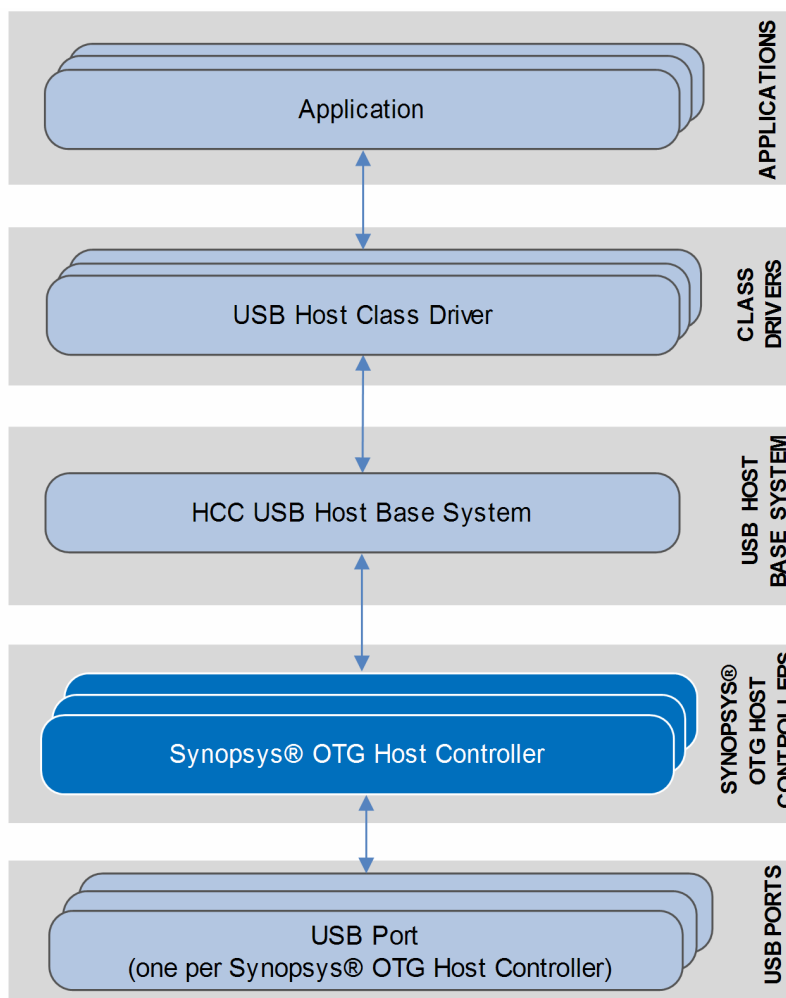

## 1.2 Feature Check

The main features of the host controller are the following:

- Conforms to the HCC Advanced Embedded Framework.
- Designed for integration with both RTOS and non-RTOS based systems.
- Integrated with HCC USB Host stack and all its class drivers.
- Supports microcontrollers with the Synopsys® On-The-Go (OTG) core. These include the STM32 connectivity line, STM32F20x, STM32F40x, Infineon XMC microcontrollers, the Silicon Labs EFM32™ family, and some Telit processors.
- Supports multiple simultaneous Synopsys® OTG controllers, each with multiple devices attached.
- Supports all USB transfer types: control, bulk, interrupt, and isochronous.
- Supports the OTG Service Request Protocol (SRP) and Host Negotiation Protocol (HNP).

## 1.3 Packages and Documents

### Packages

The table below lists the packages that you need in order to use this module:

Package	Description
<b>hcc_base_doc</b>	This contains the two guides that will help you get started.
<b>usbh_base</b>	The USB host base package. This is the framework used by USB class drivers to communicate over USB using a specific USB host controller package.
<b>usbh_drv_synopsys_otg</b>	The USB Synopsys® OTG host controller package described by this document.

### Documents

For an overview of HCC's embedded USB stacks, see [Product Information](#) on the main HCC website.

Readers should note the points in the [HCC Documentation Guidelines](#) on the HCC documentation website.

#### **HCC Firmware Quick Start Guide**

This document describes how to install packages provided by HCC in the target development environment. Also follow the *Quick Start Guide* when HCC provides package updates.

#### **HCC Source Tree Guide**

This document describes the HCC source tree. It gives an overview of the system to make clear the logic behind its organization.

#### **HCC USB Host Base System User Guide**

This document defines the USB host base system upon which the complete USB stack is built.

#### **HCC USB Synopsys® OTG Host Controller User Guide**

This is this document.

## 1.4 Change History

This section describes past changes to this manual.

- To download this manual or a PDF describing an [earlier software version](#), see [USB Host PDFs](#).
- For the history of changes made to the package code itself, see [History: usbh\\_drv\\_synopsys\\_otg](#).

The current version of this manual is 1.60. The full list of versions is as follows:

Manual version	Date	Software version	Reason for change
1.60	2019-05-31	3.16	Added OTG SRP and HRP support to <i>Feature Check</i> .
1.50	2019-02-25	3.15	Added SYNOPSYS_UH_DISCONNECT_NORESET configuration option.
1.40	2018-10-24	3.13	Added PSP version files to <i>Source Files</i> .
1.30	2017-06-19	3.11	New <i>Change History</i> format.
1.20	2015-04-24	3.07	Extended <i>Source Files</i> section. Changed <b>usbh_synopsys_otg_hc</b> .
1.10	2015-03-31	3.05	Added <i>Change History</i> , improved <i>Integration</i> section.
1.00	2015-03-05	3.05	First release.



## 2 Source File List

This section describes all the source code files included in the system. These files follow the HCC Embedded standard source tree system, described in the *HCC Source Tree Guide*. All references to file pathnames refer to locations within this standard source tree, not within the package you initially receive.

**Note:** Do not modify any of these files except the configuration file and PSP files.

### 2.1 API Header File

The file `src/api/api_usbh_synopsys_otg.h` is the only file that should be included by an application using this module. For details, see [Starting the Host Controller](#).

### 2.2 Configuration File

The file `src/config/config_usbh_synopsys_otg.h` contains all the configurable parameters. Configure these as required. For details of these options, see [Configuration Options](#).

### 2.3 Source Code Files

The source code files are in the directory `src/usb-host/usb-driver/synopsys_otg`. **These files should only be modified by HCC.**

File	Description
<code>usbh_synopsys_otg.c</code>	Source file for Synopsys® OTG code.
<code>usbh_synopsys_otg.h</code>	Header file for Synopsys® OTG public functions.
<code>usbh_synopsys_otg_hc.c</code>	Source file for HC descriptor.
<code>usbh_synopsys_otg_hc.h</code>	Descriptor header file.
<code>usbh_synopsys_otg_hub.c</code>	Source file for Synopsys® OTG hub.
<code>usbh_synopsys_otg_hub.h</code>	Header file for hub public functions.

### 2.4 Version File

The file `src/version/ver_usbh_synopsys_otg.h` contains the version number of this module. This version number is checked by all modules that use this module to ensure system consistency over upgrades.

## 2.5 Platform Support Package (PSP) Files

There are three sets of files, located in directories named **psp\_stm32f20x**, **psp\_stm32f40x** and **psp\_xmc4500**. These provide functions and elements the core code may need to use, depending on the hardware.

**Note:**

- These are PSP implementations for the specific microcontroller and development board; you may need to modify these to work with a different microcontroller and/or board. See [PSP Porting](#) for details.
- In the package these files are offset to avoid overwriting an existing implementation. Copy them to the root **hcc** directory for use.

The files, located in the directory **target**, are as follows:

File	Description
<b>include/hcc_stm32f20x_regs.h</b> <b>include/hcc_stm32f4xx_regs.h</b> <b>include/hcc_xmc4500_regs.h</b>	Register definitions for the various device types.
<b>usbh_synopsys_otg/psp_usbh_synopsys_otg.c</b>	Hardware functions code.
<b>usbh_synopsys_otg/psp_usbh_synopsys_otg.h</b>	Hardware functions header file.

There are also two version files:

File	Description
<b>ver_psp_proc_reg.h</b>	Register definitions version.
<b>ver_psp_usbh_synopsys_otg.h</b>	PSP version.

## 3 Configuration Options

Set the system configuration options in the file `src/config/config_usbh_synopsys_otg.h`. This section lists the available options and their default values.

### **SYNOPSIS\_UH\_TRANSFER\_TASK\_STACK\_SIZE**

The transfer task stack size. The default is 1024.

### **MAX\_DEVICE**

The maximum number of devices supported. The default is 8.

### **MAX\_EP**

The maximum number of bulk and interrupt endpoints. The default is 20.

### **ONE\_NAK\_PER\_FRAME**

Set this to 1 (the default) to allow only one NAK for an endpoint in a frame.

### **MAX\_NP\_TRANSFERS**

The maximum number of NP transfers. The default is 10.

### **MAX\_ISO\_TRANSFERS**

The maximum number of isochronous transfers. The default is 10.

### **MAX\_INT\_TRANSFERS**

The maximum number of interrupt transfers. The default is 10.

### **SYNOPSIS\_UH\_FS\_USED**

Keep the default of 1 if Full Speed (FS) OTG is used. Otherwise set it to 0.

### **SYNOPSIS\_UH\_HS\_USED**

Set this to 1 if High Speed (HS) OTG is used. The default is 0.

### **SYNOPSIS\_UH\_CHECK\_FS\_RESET**

Ports using the core's internal FS transceiver may fail to reset a port when a Low Speed (LS) device is connected, even though it is connected properly. Set this option to 1 if connection of LS devices is not always recognized correctly.

**SYNOPSIS\_UH\_DISCONNECT\_NORESET**

When device disconnection happens during port reset, the driver resets the Synopsys core. In certain cases this locks up the core (OTG\_GRSTCTL CSRST autoclear never happens). Set this option to disable Synopsys core reset in this case. The default is 0.

**SYNOPSIS\_UH\_BASE\_ADDRESS\_FS**

The host controller base address. The default is 0x50000000.

**SYNOPSIS\_UH\_HOST\_ISR\_ID\_FS**

The ISR ID of the Full Speed host controller. The default is 67.

**SYNOPSIS\_UH\_HOST\_INT\_PRIO\_FS**

The ISR priority of the Full Speed host controller. The default is 5.

**FORCE\_FSLS\_ON\_HS**

Set this to a non-zero value to force the host to operate in Full Speed/Low Speed-only mode, even if the used port is capable of High Speed and the attached device is High Speed. The default is zero.

**USE\_INTERNAL\_FS\_PHY**

Set this to 1 if an OTG\_HS port is used with its internal FS PHY (with no external ULPI present). The default is 0.

**SYNOPSIS\_UH\_BASE\_ADDRESS\_HS**

The host controller base address. The default is 0x40040000.

**SYNOPSIS\_UH\_HOST\_ISR\_ID\_HS**

The ISR ID of the High Speed host controller. The default is 77.

**SYNOPSIS\_UH\_HOST\_INT\_PRIO\_HS**

The ISR priority of the High Speed host controller. The default is 6.

## 4 Starting the Host Controller

This section shows how to start the host controller and describes the task created. It includes a code example.

### 4.1 `usbh_synopsys_otg_hc`

This external interface function provides the host controller descriptor required by the `usbh_hc_init()` function.

#### Format

```
extern void * const usbh_synopsys_otg_hc
```

### 4.2 Host Controller Task

The host controller task handles all completed transfers. Callback requested for the transfer is executed from this task.

The task has the following attributes:

Attribute	Description
Entry point	One of the following: <ul style="list-style-type: none"><li>• <code>synopsys_uh_transfer_task_fs</code> for a Full Speed transfer.</li><li>• <code>synopsys_uh_transfer_task_hs</code> for a High Speed transfer</li></ul>
Priority	OAL_HIGHEST_PRIORITY (USBH_TRANSFER_TASK_PRIORITY)
Stack size	<code>SYNOPSYS_UH_TRANSFER_TASK_STACK_SIZE</code> . The default is 1024.

## 4.3 Code Example

This example shows how to initialize the host controller. Note the following:

- There is only one external interface function, **usbh\_synopsys\_otg\_hc()**. To link this host controller to the system, you call the **usbh\_hc\_init()** function with this function as a parameter.
- The last parameter in the **usbh\_hc\_init()** call is the number of the host controller.

```
void start_usb_host_stack ( void )
{
int rc;
rc = hcc_mem_init();

if ( rc == 0 )
{
rc = usbh_init();           /* Initialize the USB host stack */
}

if ( rc == 0 )
{
/* Attach the Synopsys host controller */
rc = usbh_hc_init( 0, usbh_synopsys_otg_hc, 0 );
}

if ( rc == 0 )
{
rc = usbh_start();         /* Start the USB host stack */
}

if ( rc == 0 )
{
rc = usbh_hc_start( 0 );   /* Start the Synopsys host controller */
}

.....
}
```

# 5 Integration

This section specifies the elements of this package that need porting, depending on the target environment.

## 5.1 OS Abstraction Layer

All HCC modules use the OS Abstraction Layer (OAL) that allows the module to run seamlessly with a wide variety of RTOSes, or without an RTOS.

This module requires the following OAL elements:

OAL Resource	Number Required
Tasks	1
Mutexes	1
Events	1
ISRs	1

## 5.2 PSP Porting

The Platform Support Package (PSP) is designed to hold all platform-specific functionality, either because it relies on specific features of a target system, or because this provides the most efficient or flexible solution for the developer.

The module makes use of the following standard PSP function:

Function	Package	Element	Description
<b>psp_memset()</b>	psp_base	psp_string	Sets the specified area of memory to the defined value.

The host controller makes use of the following functions that must be provided by the PSP. These are designed for you to port them easily to work with your hardware solution. The package includes samples for the STM32F20x, STM32F4xx and XMC4500 families in the **psp\_usbh\_synopsys\_otg.c** files .

Function	Description
<b>synopsys_uh_hw_init()</b>	Initializes the device.
<b>synopsys_uh_hw_start()</b>	Starts the device.
<b>synopsys_uh_hw_stop()</b>	Stops the device.
<b>synopsys_uh_hw_delete()</b>	Deletes the device, releasing the associated resources.
<b>synopsys_uh_hw_reset_start()</b>	Starts a reset.
<b>synopsys_uh_hw_reset_end()</b>	Ends a reset.
<b>synopsys_uh_hw_suspend()</b>	Suspends a device.
<b>synopsys_uh_hw_resume()</b>	Resumes a suspended device.
<b>synopsys_uh_hw_state()</b>	Gets the state of a device.
<b>synopsys_uh_hw_get_ms()</b>	Gets the device timer value in ms.

These functions are described in the following sections.

**Note:** HCC can provide samples for different configurations; contact [support@hcc-embedded.com](mailto:support@hcc-embedded.com).



## synopsys\_uh\_hw\_init

This function is provided by the PSP to initialize the device.

### Format

```
int synopsys_uh_hw_init ( t_usbh_unit_id unit )
```

### Arguments

Argument	Description	Type
unit	The unit ID.	t_usbh_unit_id

### Return Values

Return value	Description
USBH_SUCCESS	Successful execution.
USBH_ERROR	Operation failed.

## synopsys\_uh\_hw\_start

This function is provided by the PSP to start the device.

### Format

```
int synopsys_uh_hw_start ( t_usbh_unit_id unit )
```

### Arguments

Argument	Description	Type
unit	The unit ID.	t_usbh_unit_id

### Return Values

Return value	Description
USBH_SUCCESS	Successful execution.
USBH_ERROR	Operation failed.

## synopsys\_uh\_hw\_stop

This function is provided by the PSP to stop the device.

### Format

```
int synopsys_uh_hw_stop ( t_usbh_unit_id unit )
```

### Arguments

Argument	Description	Type
unit	The unit ID.	t_usbh_unit_id

### Return Values

Return value	Description
USBH_SUCCESS	Successful execution.
USBH_ERROR	Operation failed.

## synopsys\_uh\_hw\_delete

This function is provided by the PSP to delete the device, releasing the associated resources.

### Format

```
int synopsys_uh_hw_delete ( t_usbh_unit_id unit )
```

### Arguments

Argument	Description	Type
unit	The unit ID.	t_usbh_unit_id

### Return Values

Return value	Description
USBH_SUCCESS	Successful execution.
USBH_ERROR	Operation failed.

## synopsys\_uh\_hw\_reset\_start

This function is provided by the PSP to start a reset.

### Format

```
void synopsys_uh_hw_reset_start ( t_usbh_unit_id unit )
```

### Arguments

Argument	Description	Type
unit	The unit ID.	t_usbh_unit_id

### Return Values

None.

## synopsys\_uh\_hw\_reset\_end

This function is provided by the PSP to end a reset.

### Format

```
void synopsys_uh_hw_reset_end ( t_usbh_unit_id unit )
```

### Arguments

Argument	Description	Type
unit	The unit ID.	t_usbh_unit_id

### Return Values

None.

## synopsys\_uh\_hw\_suspend

This function is provided by the PSP to suspend a device.

### Format

```
void synopsys_uh_hw_suspend ( t_usbh_unit_id unit )
```

### Arguments

Argument	Description	Type
unit	The unit ID.	t_usbh_unit_id

### Return Values

None.

## synopsys\_uh\_hw\_resume

This function is provided by the PSP to resume a device.

### Format

```
void synopsys_uh_hw_resume ( t_usbh_unit_id unit )
```

### Arguments

Argument	Description	Type
unit	The unit ID.	t_usbh_unit_id

### Return Values

None.



## synopsys\_uh\_hw\_state

This function is provided by the PSP to get the state of a device.

### Format

```
int synopsys_uh_hw_state ( t_usbh_unit_id unit )
```

### Arguments

Argument	Description	Type
unit	The unit ID.	t_usbh_unit_id

### Return Values

Return value	Description
USBH_SUCCESS	Successful execution.
USBH_ERROR	Operation failed.

## synopsys\_uh\_hw\_get\_ms

This function is provided by the PSP to get the device timer value in ms.

**Note:** This is only used if full speed OTG is used and `SYNOPSISYS_UH_CHECK_FS_RESET` is enabled.

### Format

```
uint16_t synopsys_uh_hw_get_ms ( t_usbh_unit_id unit )
```

### Arguments

Argument	Description	Type
unit	The unit ID.	t_usbh_unit_id

### Return Values

Return value	Description
Time	The timer value.